

Product Descriptions

LCD RF Reversible Ceiling Fan Remote Control Kit

Model #: AS-CF250L

(Please visit our website www.a-brt.com for more info)



Features:

AS-CF250L ceiling fan remote control kit utilizes 433.92MHz radio frequency control technology. It consists of a remote control with LCD display and a rectangular shape receiver. It is designed for fans that vary their speeds by changing the capacitance in the circuit and it can make the fan rotate in both forward and backward directions. It is designed for easy installation and operation.

- Good for all ceiling fans;
- Two load outputs, one for controlling the fan and another one for controlling the lights;
- Three fan speeds;
- Precise timer function: 1, 3, 6, 9 hour;
- Forward and Reverse mode operational;
- LCD status display of fans, lights, and timer;
- ABS-V0 flame resistance material; and
- Elegant design and high quality build.

What Are Included?

AS-CF250L ceiling fan remote control kit consists of two pieces, as shown in Fig. 1

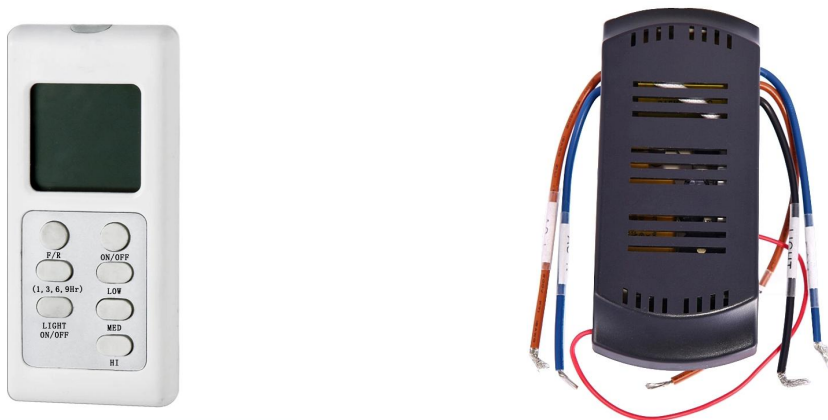


Fig. 1 AS-CF250L Ceiling Fan Remote Control Kit

Fig. 2 is a large view of the LCD display of AS-CF250L remote control unit. The displayed parameters include timer, fan speed, fan status and light status.

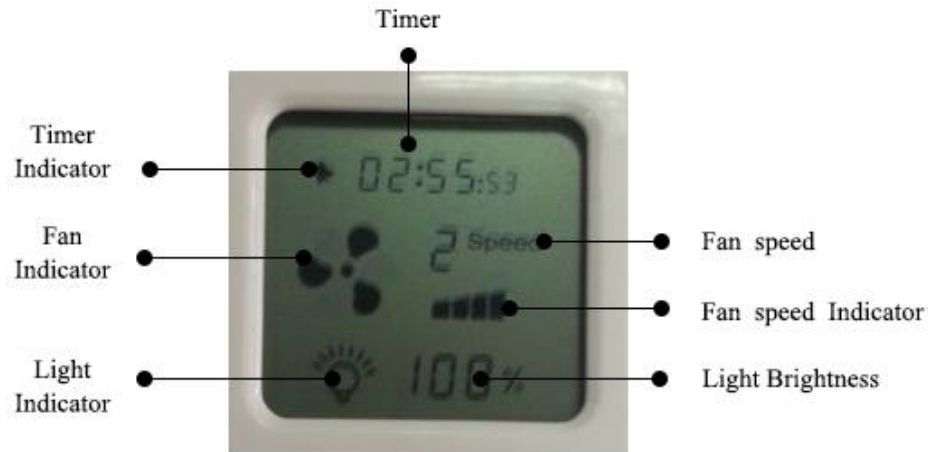


Fig. 2 LCD of AS-CF250L Remote Control Unit

 Specification Parameters:

Input Voltage	220~240V(50Hz/60Hz)	Operation Environment	No-condensation 20-90% RH, -20℃~40℃
Fan Wattage	100W	Light Wattage	600W
Battery for Remote Control	23A, 12V	Working Distance of Remote Control	10m
Remote Control Dimension	103mm x 47mm x 13mm	Receiver Dimension	120mm x 53mm x 23mm
Remote Control Weight	55g	Receiver Weight	108g

 Wiring Diagram and Installation Guide:

AS-CF250L remote control unit is battery driven and there is no wiring requirement. The receiver has its all connection wires clearly labeled, as shown in Fig. 3.


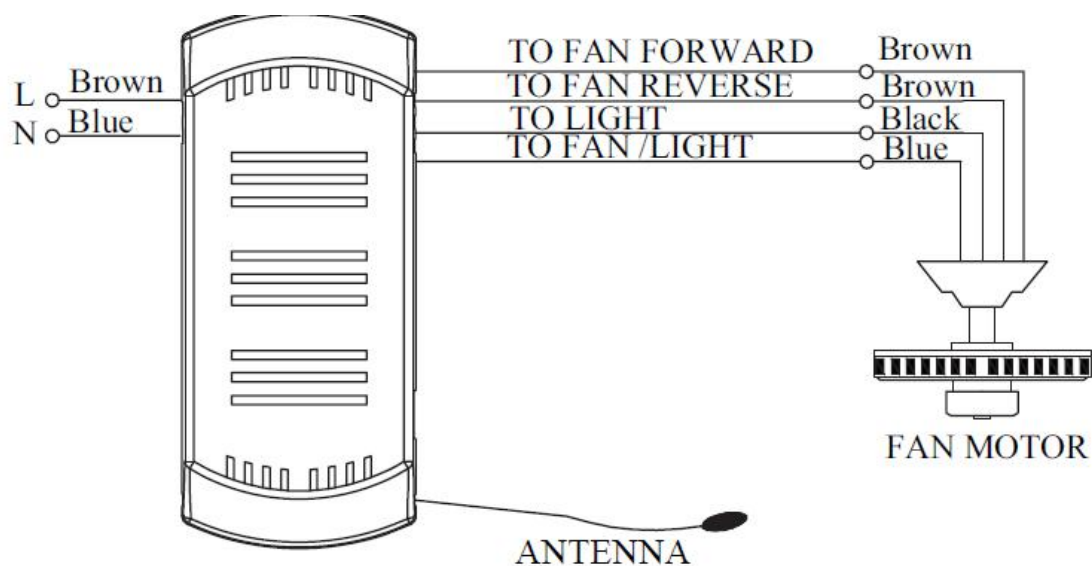


Fig. 3 AS-CF250L Receiver Wiring Diagram

ACL:	Connected to the hot wire of power supply
ACN:	Connected to the neutral wire of power supply
Light:	Connected to the lights
Motor:	Connected to the fan
COM:	Connected to the neutral wire of the fan and/or lights
Forward:	Connected to fan Forward
Reverse:	Connected to fan Reverse

Warning: Please make sure power is turned off before starting installation!

Once properly wired, the AS-CF250L receiver can be installed into the canopy of the ceiling fan, as shown in Fig. 4.

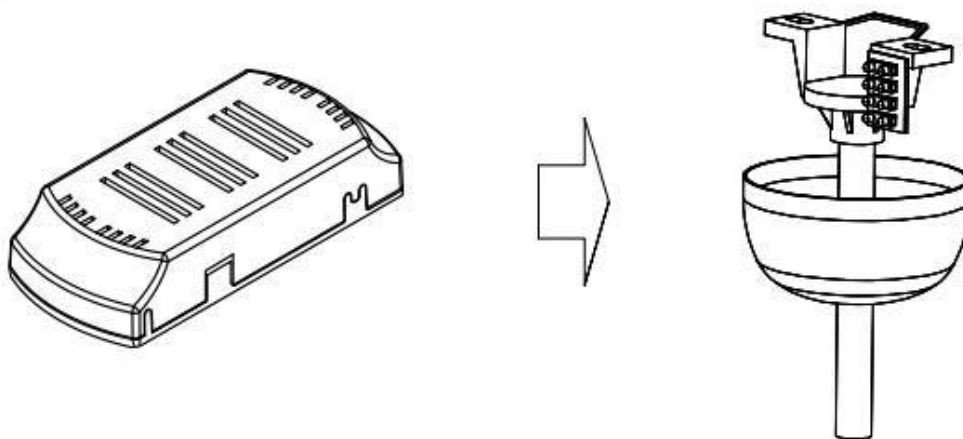

Prod

Shenzhen Asia Bright Co., Ltd.

Floor 2nd~3rd, Building E, North Area No.2 of Shangxue Science Park, Bantian, Shenzhen, China

www.a-brt.com sales@a-brt.com

© 2022 All rights reserved. Subject to change without notices.

Fig. 4 AS-CF250L Receiver Installation

▶ Setup and Operation Guide:

Fig. 5 shows the side of the receiver and the back of the remote control unit. Before operating ceiling fan and lights, please complete the following two procedures:

- a. There is a dip switch on the side of the receiver and there is a dip switch on the back of the remote control unit. Set these two dip switches to identical positions. The remote control unit will be able to send commands to the receiver and read the status from the receiver
- b. The remote control unit uses one 23A 12V battery. Please open the sliding cover and install the battery.
- c. Turn on the power supply to the ceiling fan and lights. If there is another switch to control the fan speed and the lights, please set the switch to the highest fan speed and turn on the lights.


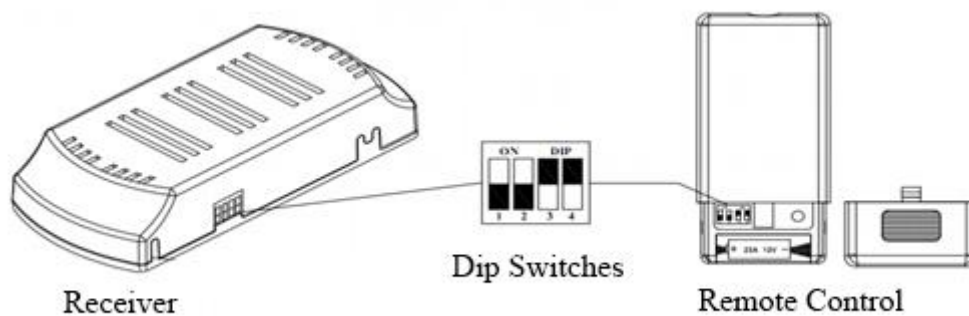


Fig. 5 Set up AS-CF250L

Now, it is ready to control the ceiling fan and lights using the remote control unit.

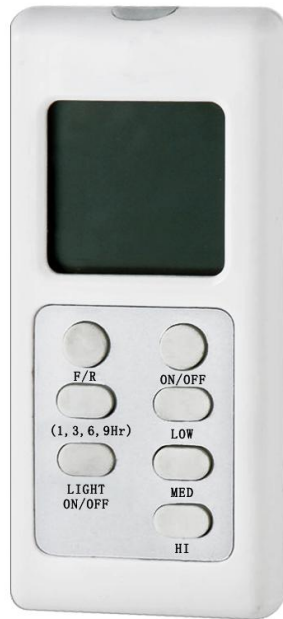

1. **Turn on fan:** The remote control unit has three buttons LOW, MID, and HI, set the fan to low speed, medium speed and high speed respectively. The fan indicator on the LCD display will be on, the fan speed indicator will show different height corresponding to the fan speed;
2. **Turn off fan:** Pressing the ON/Off button will turn off the fan;
3. **Turn on or turn off light:** Pressing the LIGHT On/Off button will turn on or turn off the lights. When the light is on, the displayed light indicator is on;
4. **Set up timer:** When the fan is on, pressing the 1,3,6,9h button will select four timer hours 1 hour, 3 hours, 6 hours, and 9 hours respectively. Other customized timer hours can be made available at factory;
5. **Forward / Reverse fan mode:** When the fan is on, press F/R to reverse the fan's rotation.

When the timer is activated, the timer indicator is on and the timer starts countdown. The fan will be turned off once the countdown timer runs out time.

Applications:

AS-CF250L ceiling fan remote control kit good is for all kind of ceiling fans, even for retrofitting an older ceiling fan. It can bring convenience and ease to our daily life and work.

They have wide applications at various locations such as homes, restaurants, conference rooms, theater, etc.

Product Description AS-CF250L

Shenzhen Asia Bright Co., Ltd.

Floor 2nd~3rd, Building E, North Area No.2 of Shangxue Science Park, Bantian, Shenzhen, China

www.a-brt.com. sales@a-brt.com.

© 2022 All rights reserved. Subject to change without notices.



How to Order:

Please contact us: Shenzhen Asia Bright Co., Ltd
Floor 2nd~3rd, Building E, North Area No.2 of Shangxue
Science Park, Bantian, Shenzhen, China
Tel: +86-755-89748200 +86-755-89748211
Email: sales@a-brt.com Website: www.a-brt.com